


ENERGY TECH RGB RF / 20W

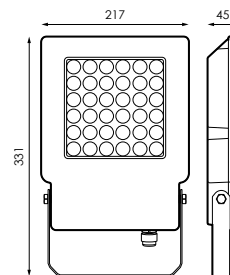

ENERGY TECH RGB RF / 50W

AVISO


ANTES DE COMENZAR LA INSTALACIÓN DE ÉSTE PRODUCTO, POR FAVOR, LEA ATENTAMENTE LAS INSTRUCCIONES Y GUÁRDENLAS EN UN SITIO SEGURO.

LA INSTALACIÓN DEBE REALIZARLA PERSONAL CUALIFICADO.

LA GARANTÍA CUBRE ÚNICA Y EXCLUSIVAMENTE EL PRODUCTO SUMINISTRADO.

LAS AVERÍAS OCASIONADAS POR INSTALACIONES FUERA DE LO QUE INDICA EL REBT 2002 EXIMEN DE LA VIGENCIA DE LA GARANTÍA EN LOS PRODUCTOS DAÑADOS.

ES DE OBLIGADO CUMPLIMIENTO EN INSTALACIONES INTERIORES LA APLICACIÓN DEL ARTÍCULO 16, PUNTO 3 DEL REBT 2002.

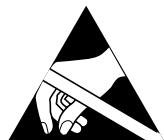

ATENCIÓN!!!

RESPECTAR LAS PRECAUCIONES DE MANIPULACIÓN DE LOS COMPONENTES SENSIBLES A DESCARGAS ELECTROSTÁTICAS (LED).

CARACTERÍSTICAS ELÉCTRICAS

Tensión	100-240V ac
---------	-------------

GRADO PROTECCIÓN

Aislamiento eléctrico	⊕
Grado de estanqueidad	IP65

CARACTERÍSTICAS FÍSICAS

Peso (kg)	20W	0,74
	50W	1,72



PRECAUCIONES:


- Este producto es para uso exterior.
- No manipular el producto mientras se encuentra en funcionamiento. Para su manipulación desconecte la corriente.
- No sumerja este producto en agua ni lo manipule con las manos mojadas.
- Si el producto se encuentra dañado sustitúyalo por uno nuevo.
- En caso de rotura o daño del cristal protector deberá reemplazarlo inmediatamente.
- No toque el cuerpo del protector cuando esté caliente.
- Siga atentamente las instrucciones de este manual.
- En caso de duda consulte con un técnico especializado.
- El cable flexible o cordón exterior de esta luminaria no puede sustituirse, en el caso de que este dañado, la luminaria debe destruirse.
- El bloque de conexión no se incluye. La instalación puede requerir la intervención de una persona cualificada.
- La luminaria debería colocarse de forma que no se espera una mirada prolongada a la luminaria a una distancia más cercana a x 1m.

INSTRUCCIONES DE MONTAJE:


1. Desconecte la corriente.
2. Desmonte la lira de la luminaria.
3. Fije la lira a la superficie de montaje con la tornillería apropiada.
4. Sujete la luminaria a la lira con sus accesorios correspondientes.
5. Conecte los cables de línea (L), neutro (N) y puesta a tierra (⊕) correctamente al cable de alimentación.
6. Regule la posición de la luminaria y aprete los tornillos.
7. Conecte la corriente.

CARACTERÍSTICAS:

- Pila de mando no incluida.
- Máximo radio de alcance del mando 40m.

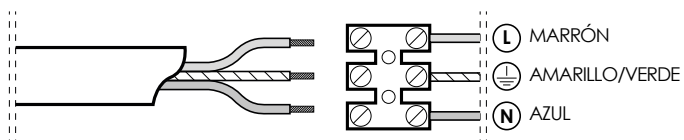


La luminaria puede conectarse a la red eléctrica a través de bloque de conexión, por ejemplo, Stucchi tipo 1602/VCB-SM, 2602/VCB-SM. Como alternativa, puede utilizarse un bloque de conexión estanco, por ejemplo, Techno tipo THB384A1A, THB384B1A.

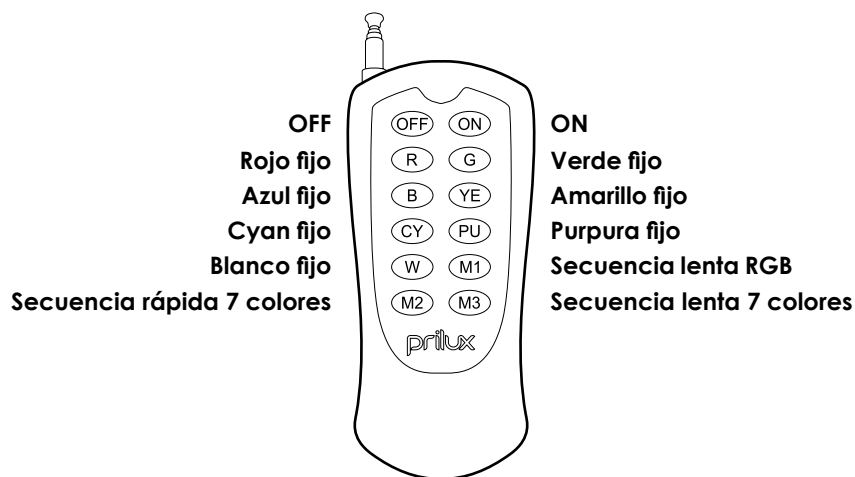


POSICIÓN DE MONTAJE:

Para evitar la acumulación de agua en la parte del difusor, coloque la luminaria con una inclinación de 10°.

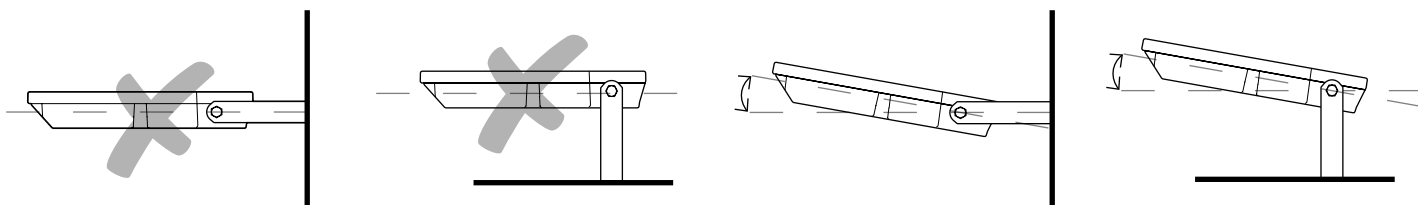


LIRA:

20W


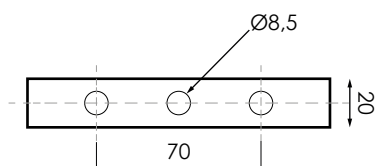


50W

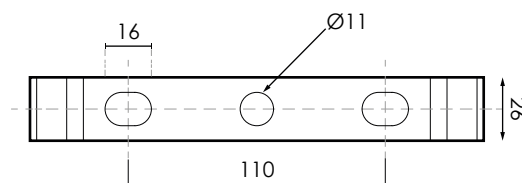


www.grupoprilux.com



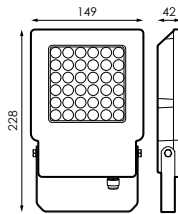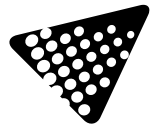

ENERGY TECH RGB RF / 20W

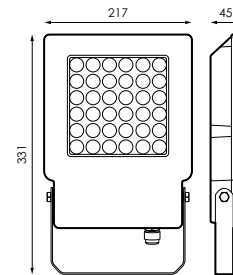

ENERGY TECH RGB RF / 50W


AVISO

BEFORE BEGINNING INSTALLATION OF THIS PRODUCT, PLEASE READ THE INSTRUCTIONS CAREFULLY AND STORE THEM IN A SAFE PLACE.

INSTALLATION MUST BE CARRIED OUT BY QUALIFIED PERSONNEL.

IMPROPER HANDLING OF THE COMPONENTS OR OF THE LUMINAIRE ITSELF MAY DAMAGE THE CORRECT OPERATION OF THIS PRODUCT AND WILL VOID THE MANUFACTURER'S WARRANTY.

THE MANUFACTURER'S WARRANTY IS VOID: IF INSTALLATION IS NOT CARRIED OUT IN ACCORDANCE WITH THE REBT 2002.

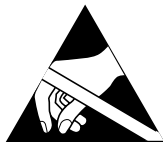

ATENCIÓN!!!

OBSERVE THE PRECAUTIONS FOR HANDLING COMPONENTS SENSITIVE TO ELECTROSTATIC DISCHARGE (LED).

ELECTRICAL CHARACTERISTICS

Voltage	100-240V ac
---------	-------------

DEGREE OF PROTECTION

Electrical isolation	⊕
Degree of watertightness	IP65

PHYSICAL CHARACTERISTICS

Weight (kg)	20W	0,74
	50W	1,72



PRECAUTIONS:


- This product is for outdoor use.
- Do not handle the product while it is in operation. When handling, switch off the power supply.
- Do not immerse this product in water or handle it with wet hands.
- If the product is damaged, replace it with a new one.
- In the event of breakage or damage to the protective glass, it must be replaced immediately.
- Do not touch the body of the protector when it is hot.
- Carefully follow the instructions in this manual.
- If in doubt, consult a qualified technician.
- The flexible cable or outer cord of this luminaire cannot be replaced; if damaged, the luminaire must be destroyed.
- The connection block is not included. The installation may require the intervention of a qualified person.
- The luminaire should be positioned so that a long look at the luminaire at a distance closer to x 1m is not expected.

ASSEMBLY INSTRUCTIONS:


1. Turn off the power.
2. Remove the bracket from the luminaire.
3. Attach the bracket to the mounting surface with the appropriate screws.
4. Attach the luminaire to the bracket with its accessories.
5. Connect the line (L), neutral (N) and ground cables (⊕) correctly to the power cord.
6. Adjust the position of the luminaire and tighten the screws.
7. Turn on the power.

CHARACTERISTICS:

- Control battery not included.
- Maximum radius of control range 40m.

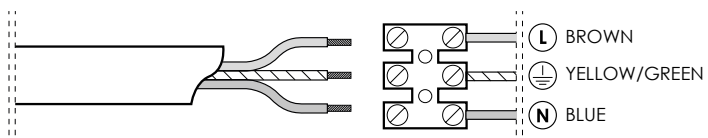


The luminaire can be connected to the mains via a connection block, e.g. Stucchi type 1602/VCB-SM, 2602/VCB-SM. As an alternative, a watertight connection block can be used, e.g. Techno type THB384A1A, THB384B1A.

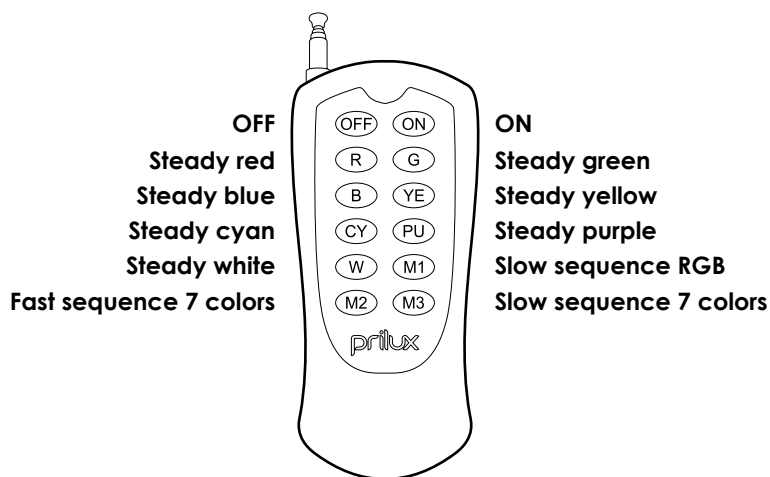


MOUNTING POSITION:

To prevent water accumulation in the diffuser part, place the luminaire at a 10° angle.

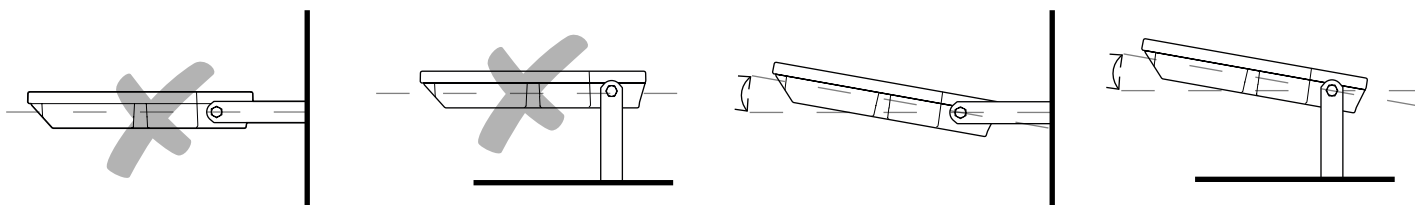


BRACKET:

20W

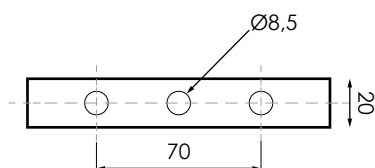

50W

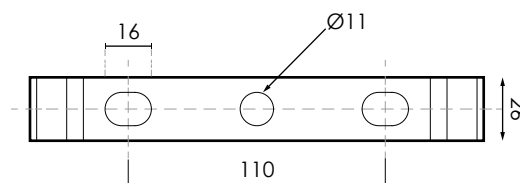

www.grupoprilux.com

